



KLH Speaker Tweeter and Driver Replacement

Replace the tweeter and driver of a KLH bookshelf speaker.

Written By: Mark Lee Hensley



INTRODUCTION

Use this guide to replace the tweeter and driver of your KLH bookshelf speaker.



TOOLS:

- [Phillips #2 Screwdriver](#) (1)
 - [Flathead Screwdriver or sudger](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
 - [8" Needle Nose Plier](#) (1)
-

Step 1 — Tweeter and Driver





- Remove the front speaker mesh, to expose the speakers. The mesh will lift off without the use of tools.

Step 2



- Once mesh is removed, begin to remove the screws securing the small upper speaker/tweeter with a #1 Philips head screwdriver.

Step 3

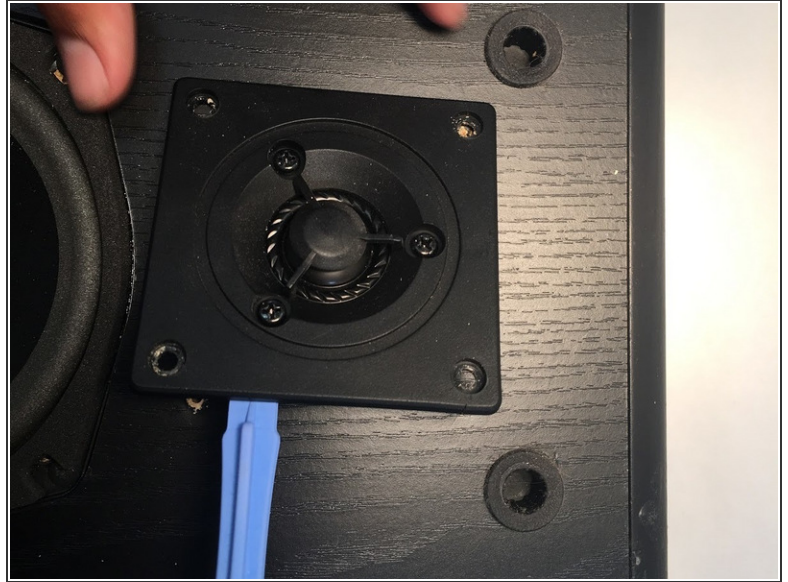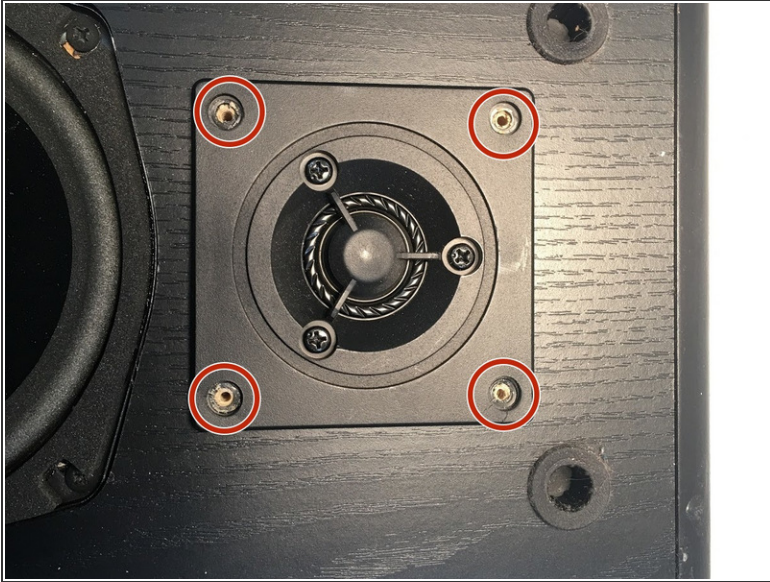


- Once the screws have been removed, begin to remove the small upper speaker. To do this, pry it out with either a flatblade screwdriver or sudge.
- ⓘ Take care to not damage the speakers wooden body, whilst prying the speaker out.

Step 4




- After you have removed the speaker, disconnect the Red and Brown wires, from the speaker.
- ⓘ You might require needlenose pliers to do this.

Step 5

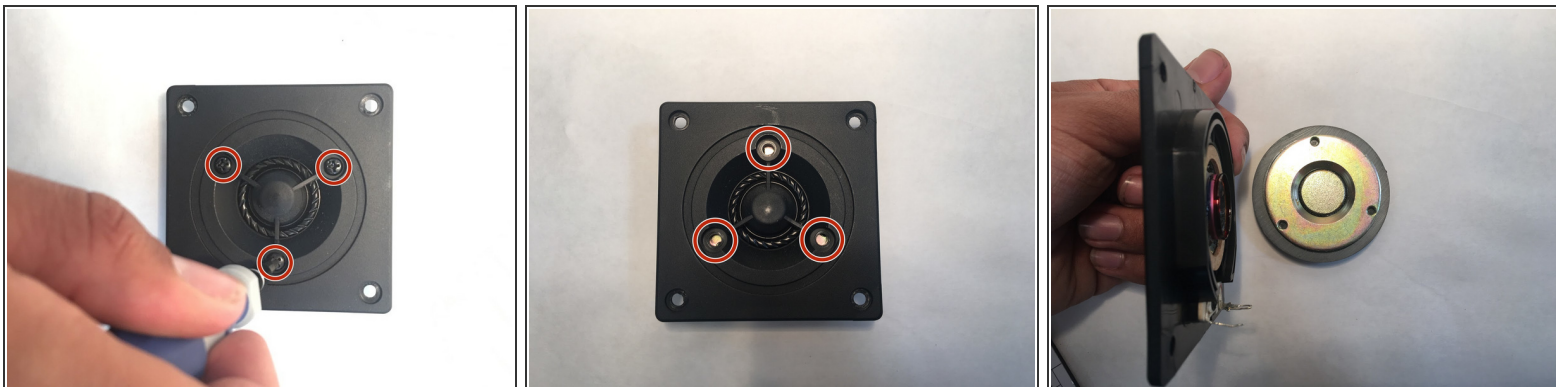

- Remove the speaker from its plastic bezel. To do this you'll require a #1 Philips head screwdriver.

Step 6

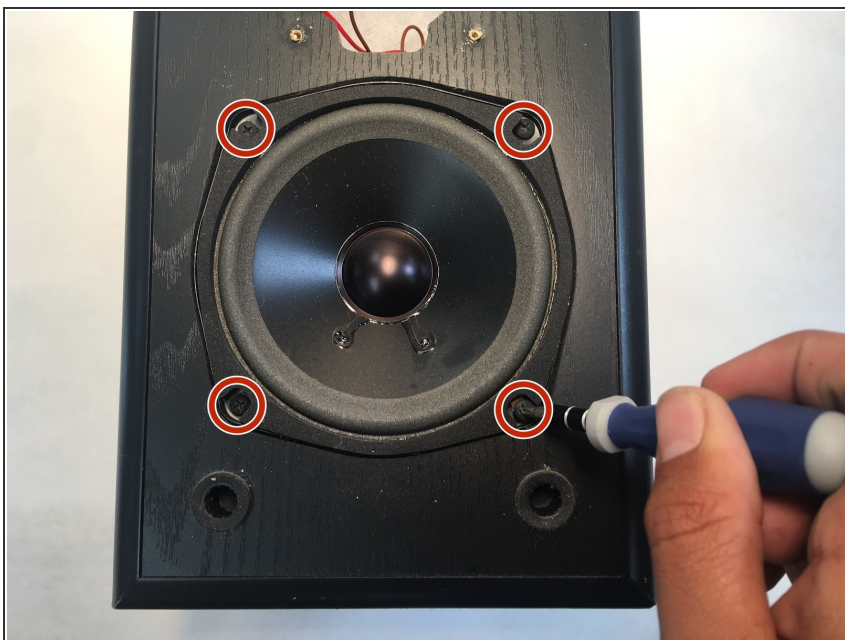


- For the larger bottom speaker, the same steps will be taken to remove the speaker.
- Remove the four screws securing the speaker.

Step 7



- Once the screws are removed, to remove the speaker you'll either have to pry it out or push it out from underneath the boxes frame.

Step 8

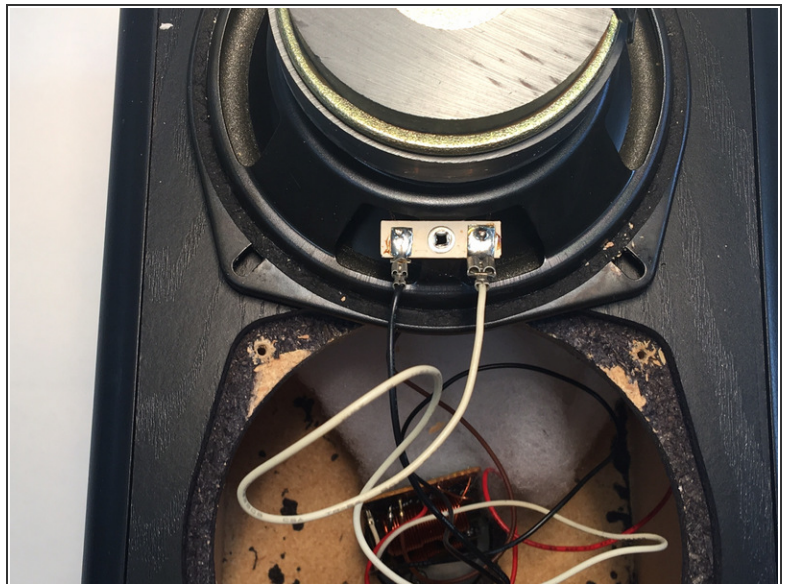

- Once the speaker is removed, remove the Black and White wires.

To reassemble your device, follow these instructions in reverse order.

